



## HAYLING ISLAND SAILING CLUB FIXED RADIO INSTRUCTIONS

### STANDARD HORIZON QUEST GX1500E

1. Power ON / OFF	On: Press and hold the Volume Dial until the display appears. Off: Press and hold the Volume Dial until the display clears. Round Volume dial located bottom right.
2. Channel Selection	Select channel using the large round dial located top right.
3. Transmitting	Press the Gray PTT button located on the left hand side of the fist mic when talking only. Release the button to listen.
4. Volume Control	Adjust the volume by turning the round Volume dial located bottom right..
5. Hi / Low Transmit power (User selection)	Press the H/L button. The display will indicate Low (L) or High (H). If nothing is displayed it is on the pre set power for the channel.
6. Squelch	Adjust the Squelch by turning the round Squelch dial located bottom and is the left dial.
7. DSC Alarm	<b>If this sounds you must press the CLR button until the alarm stops sounding. Then re select your working channel.</b>
Channels	All fixed radio's have a full set of channels. 37, 37A, M, M1, N and N1 are the same channel. M2 and N2 are the same. What is displayed depends on make and manufacture date or display size/quality.
Call signs (All listening Channel 37)	Sandy (Race Box), Hayling Club (Office), Marine department, Selene (Club ferry), Marine manager and Hayling Rescue (Frank Dunster).