

MISSY - OPERATING INSTRUCTIONS

1 Before leaving shore you will need to collect

- Clipboards
- Flag Roll
- Flags on sticks
- Key
- Race Officers Bag
- Safety Box

2 **To start the Engine**

- Turn on battery switch - under forward floor panel to both.
- Turn the key clockwise one position so as ignition lights illuminate.
- Hold the button labelled "pre-heat" for 20 seconds.
- Depress the button on the throttle and move throttle to forward position.
- Turn the key further clockwise. The engine will start. Release the key. Return the throttle lever to neutral position.
- Alternator warning light will continue until the engine is revved to 2500RPM. Thereafter this warning light will only reappear if the alternator ceases to charge.
- To stop the engine turn the key anti-clockwise.

3 **To Operate the Radio**

Follow laminated instructions on boat.

4 **To Operate Instruments**

- Put displays into cradles in cuddy
- Press the left most button on one of the displays for 2 seconds (all displays will turn on)
- The information required is available by pressing the left most button to scroll through the preset pages
- Turn off the instruments by pressing and holding the left most button for 2 seconds (all displays will turn off)

5 **Before leaving the boat**

- Turn off instruments as above and return in their cases to the Race Officers bag.
- Remove the starting key.
- Switch battery switch to the off position.
- Ensure all flags are stowed back in the flag roll and returned to the marine office.
- Stow all ground tackle neatly and remove any inflatable buoys and take ashore.
- Check the boat is secure on mooring No.44

6 **Returning all Equipment**

- Return the equipment to the marine office.
- Report any faults on the Boat Check sheet in the marine office.