

RIB Starting Procedure

1. Check fuel.
2. Check the tubes are correctly inflated.
3. Pump the rubber bulb on the fuel line until firm and ensure both fuel line fittings are located.
- 4. Insert the kill cord over ignition switch.**
5. Insert the ignition key.
6. Ensure engine is in raised position prior to launch.
7. When the boat is launched lower the motor using the power trim switch on the throttle arm.
8. Check the main throttle/gear change lever is in the neutral position.
9. Turn the key clockwise gently until a click is felt. The engine should complete a self check then beep
10. You are now ready to start the engine.
Turn the ignition key in a clockwise direction.
11. Engage gear by pulling up the neutral lock
(Under the main throttle handle) and move forward or reverse as required.
12. Do not use the fast idle lever at any time as this puts the engine into winterization mode.