

HAND HELD RADIO INSTRUCTIONS

	ICOM hand held radio	Navico hand held radio
Power ON/OFF	<p>The two tier dial on the top of the radio the ON/OFF knob. Turn the top tier clockwise to turn the radio on.</p> <p>When returning the radio after using it, leave it switched on. This will help to ensure that the battery's life is maximised.</p>	<p>The top green button on the left-hand side of the radio is the ON/OFF switch. Press this once and there will be a single beep. The TX and RX lights should be flashing. If the BAT light in the middle flashes, the battery is flat and the radio should be returned to the office immediately.</p> <p>When returning the radio after using it, leave it switched on. This will help to ensure that the battery's life is maximised.</p>
High/Low Power	<p>Always starts on High Power.</p> <p>To turn over to Low power for Harbour use press button labelled H/L.</p> <p>When on low power the radio will display the word "LOW" in top right-hand corner of the screen. It may be necessary to use High Power if you are covering an Open Meeting in the Bay.</p>	<p>The flashing TX light indicates that the radio will transmit on High Power. This is usually unnecessary so press the top button of the three on the right hand side on the front to use Low Power. The TX light should stop flashing.</p> <p>It may be necessary to use High Power if you are covering an Open Meeting in the Bay.</p>
Channel Selection	Use the up and down arrows on the front.	Left knob on top of radio
Viewing Channel	Display screen 37, P4(M2), 46, 47	Small window beside channel button – turn on the light using bottom green button on the front face. A(37), B(M2), C(46), D(47)
Volume Control	The volume knob is the top tier of the knob on top of the radio used to turn it on/off. Turning the knob clockwise increases the volume.	To ensure that the set's volume is properly adjusted press and hold the middle button (squelch) of the three on the right hand side. Adjust the volume control on the top of the radio until the noise is at a satisfactory level. Then release the button.
Transmitting	<p>To transmit, press and hold down the large button on the left-hand side. The microphone is on the front of the radio.</p> <p>When in a RIB or open boat, particularly when under way, noise in the microphone is often a problem. Make sure that the microphone is shielded from direct wind when transmitting</p>	<p>To transmit, press and hold down the large button on the left-hand side. The microphone is on the front of the radio.</p> <p>When in a RIB or open boat, particularly when under way, noise in the microphone is often a problem. Make sure that the microphone is shielded from direct wind when transmitting.</p>